

ZKBiosecurity – Rename Readers


You need to rename each Reader so that it can be easier to be able to identify which reader you will be using.

Per device, you will have 2 readers which will be In and Out, as the device can connect a slave reader.


On 1. Set device in/out Status, if you changed your device's State to be IN. You need to work with Reader 1 which its output is IN.

Device > Device > Reader

Select the reader by click on Edit

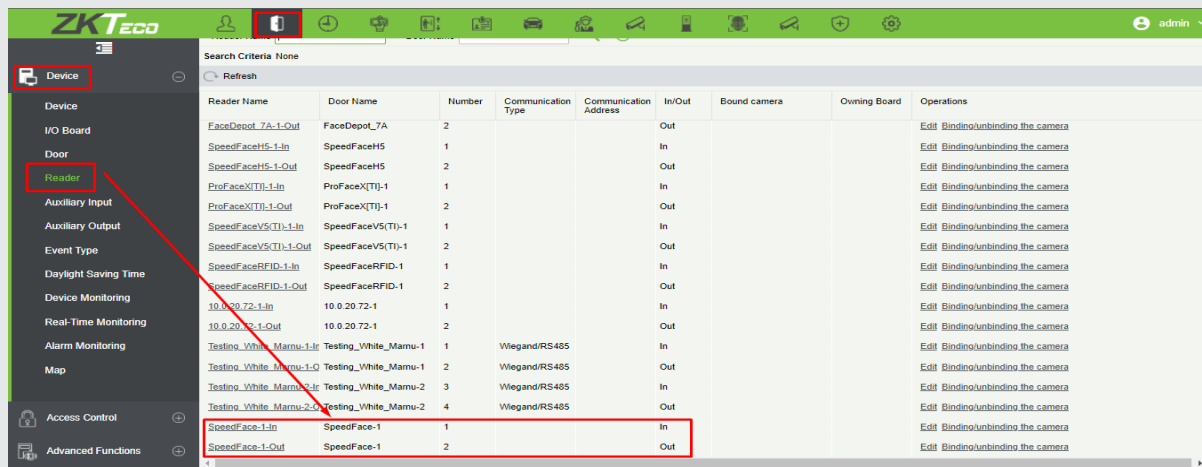

Rename the readers name

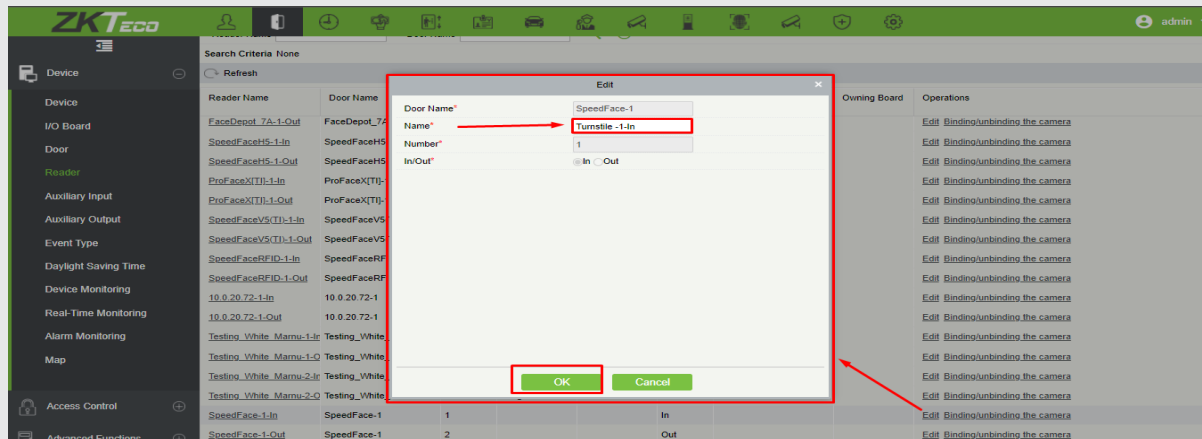

Here you can see one is renamed and the other one is the previous name

Turnstile -1-In	SpeedFace-1	1			In			Edit Binding/unbinding the camera
SpeedFace-1-Out	SpeedFace-1	2			Out			Edit Binding/unbinding the camera

You need to do this for each Standalone reader that you will be using towards the Global Anti-Passback.

NB: If you are using an InBio260 (2 door controller) on a single Turnstile that is bi-directional, you will have 4 readers in total, you will have to rename reader 1 (Under relay 1) to be In and rename reader 4 (Under relay 2) to be Out.

Reader Name	Door Name	Number	Communication Type	Communication Address	In/Out	Bound camera	Owning Board	Operations
G4-1-Out	G4	2			Out			Edit Binding/unbinding the camera
FaceDepot_7A-1-In	FaceDepot_7A	1			In			Edit Binding/unbinding the camera
FaceDepot_7A-1-Out	FaceDepot_7A	2			Out			Edit Binding/unbinding the camera
SpeedFaceHS-1-In	SpeedFaceHS	1			In			Edit Binding/unbinding the camera
SpeedFaceHS-1-Out	SpeedFaceHS	2			Out			Edit Binding/unbinding the camera
ProFaceXTI-1-In	ProFaceXTI-1	1			In			Edit Binding/unbinding the camera
ProFaceXTI-1-Out	ProFaceXTI-1	2			Out			Edit Binding/unbinding the camera
SpeedFaceV5(TI)-1-In	SpeedFaceV5(TI)-1	1			In			Edit Binding/unbinding the camera
SpeedFaceV5(TI)-1-Out	SpeedFaceV5(TI)-1	2			Out			Edit Binding/unbinding the camera
SpeedFaceRFID-1-In	SpeedFaceRFID-1	1			In			Edit Binding/unbinding the camera
SpeedFaceRFID-1-Out	SpeedFaceRFID-1	2			Out			Edit Binding/unbinding the camera
10.0.20.72-1-In	10.0.20.72-1	1			In			Edit Binding/unbinding the camera
Turnstile-1-Out	10.0.20.72-1	2			Out			Edit Binding/unbinding the camera
Testing-1-In	Testing-1 Relay 1	1	Wiegand/RS485		In			Edit Binding/unbinding the camera
Testing-1-Out	Testing-1 Relay 1	2	Wiegand/RS485		Out			Edit Binding/unbinding the camera
Testing-2-In	Testing-2 Relay 2	3	Wiegand/RS485		In			Edit Binding/unbinding the camera
Testing-2-Out	Testing-2 Relay 2	4	Wiegand/RS485		Out			Edit Binding/unbinding the camera