

## ZKBiosecurity – Set Zones

It mainly uses partition Zones in advanced access control. When using such advanced functions as Global Zone APB, you must define Access Zones.

**NB: Please do not use the default Zone as it doesn't work, you need to define your Zones.**

Device > Advance Functions > Zone

Select new

You can define it by giving it any name, but in this case, I will be using a direction of the reader/device that I will be using.

Select OK

