 



# TF1700 Installation Guide

Version: 1.2 Date: May, 2020


## 1. Equipment Installation




(1) Post the mounting template on the wall. Drill the holes according to the marks on the template (holes for screws and wiring).

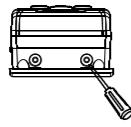


(2) Remove the screws on the bottom of device.

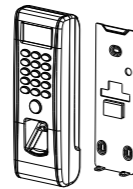

(3) Take away the back plate.

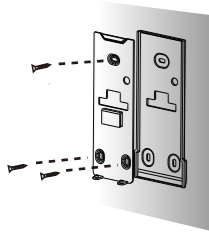


(4) Fix the plastic pad and the back plate on the wall according to the mounting paper.

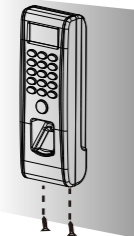

(5) Tighten the screws on the bottom, fix the device to the back plate.

**Note:** To effectively protect the device from water and dust, TF1700 must be installed vertically perpendicular to the ground.

## 2. Structure and Function

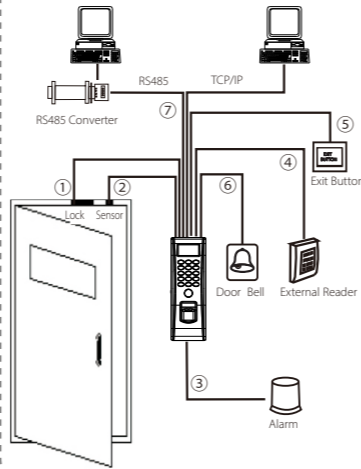

### Access Control System Function


- (1) If a registered user verified, the device will export the signal to unlock the door.
- (2) Door sensor will detect the on-off state. If the door is unexpectedly opened or improperly closed, the alarm signal (digital value) will be triggered.
- (3) If only the device being illegally removed, the device will export alarm signal.
- (4) External card reader is supported.
- (5) External exit button is supported, it is convenient to open the door inside.
- (6) External door bell is supported.
- (7) Supports RS485, TCP/IP modes to connect with PC. One PC can manage multiple devices.

## 3. Lock Connection

- (1) The system supports NO lock and NC lock. For example, the NO lock (normally open at power on) is connected with "NO" and "COM" terminals, and the NC lock is connected with "NC" and "COM" terminals.
- (2) When the electrical lock is connected to the Access Control System, you need to parallel one FR107 diode (equipped in the package) to prevent the self-inductance EMF affect the system, **do not reverse the polarities.**

**Warning: No operating with power on**


(1) Share power with the lock:

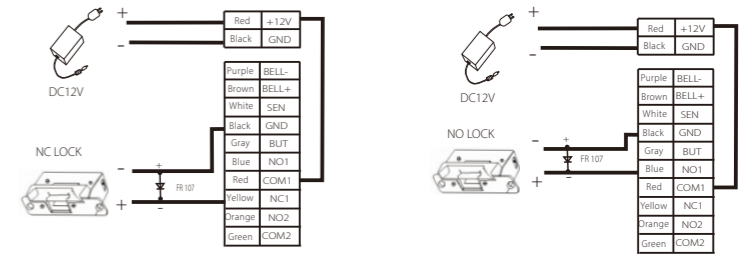

Device share power with the lock:

$U_{lock} = 12V, I_{lock} > 1A$  (1); And the distance between the lock and the device is  $\leq 10$  meters.

(2) Does not share power with the lock:

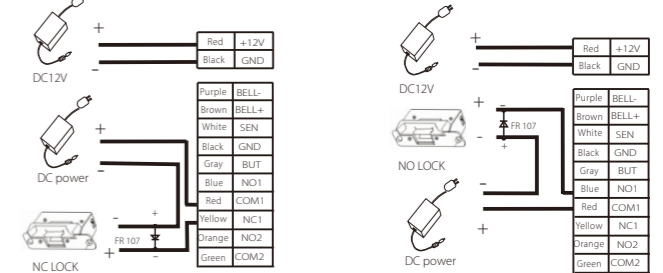


Device does not share power with the lock:


A.  $U_{lock} = 12V, I_{lock} \leq 1A$ ; B.  $U_{lock} \neq 12V$ ; C. The distance between the lock and the device is  $> 10$  meters.

① 'I': device output current, 'U<sub>lock</sub>': lock voltage, 'I<sub>lock</sub>': lock current.

## 4. Other Connection

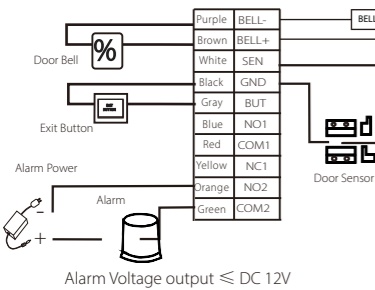


## 5. Power Connection

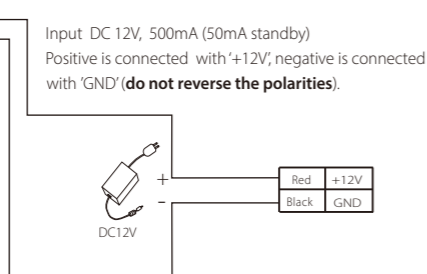

## 6. Wiegand Output


The device supports standard Wiegand 26 output, so you can connect it with most of the access control devices by now.

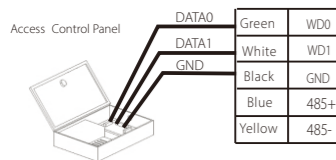

- (1) Please keep the distance between the device and Access Control or Card Reader less than 90 meters (Please use Wiegand signal extender in long distance or interference environment).
- (2) To keep the stability of Wiegand signal, connect the device and the access control or card reader in same "GND" in any case.

## 7. Wiegand Input


The device has the function of Wiegand signal input. It supports to connect with an independent card reader. They are installed each side of the door, to control the lock and access together.

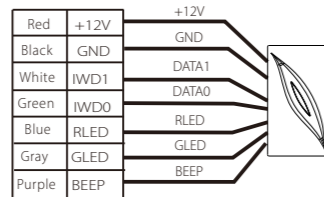

## 8. Other Functions

### (1) Manual Reset:

If the device does not work properly because of misoperation or other abnormality, you can use "Reset" function to restart it. **Operation:** Remove the black rubber cap, then stick the Reset button hole with a sharp tool (the tip diameter less than 2mm).

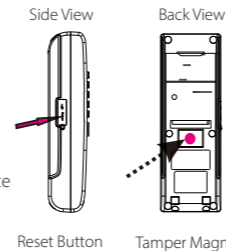

### (2) Tamper Function:

In device installation, user need to put the magnet between the device and the back plate. If the device being illegally moved, and the magnet being away from the device, it will trigger the alarm.

## 9. Communication


There are two modes that the PC software communicate and exchange information with the device: RS485 and TCP/IP, and supports remote control.

### (1) RS485 Mode:

Please use specified RS485 wire, RS485 active converter and bus-type wiring.

Terminals definition please refers to the right table.

Terminals	PC Serial Ports
485+	RS485+
485-	RS485-

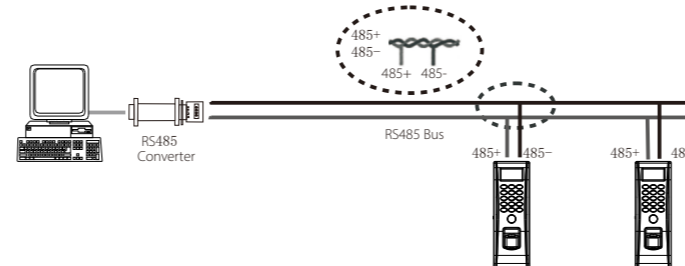


**Warning: No operating with power on**

### (2) TCP/IP Mode:

Two ways for TCP/IP connection.

(A) Crossover cable: The device and PC connected directly.

(B) Straight cable: The device and PC connected to LAN/WAN through switch/Lanswitch.

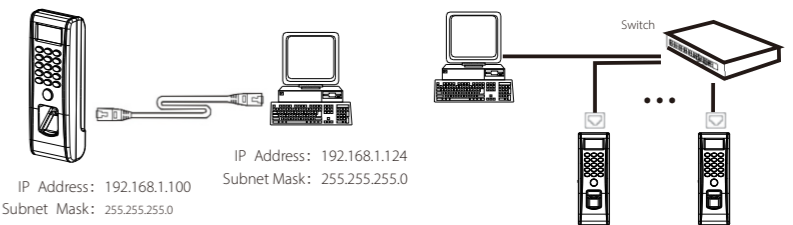

IP Address: 192.168.1.124  
Subnet Mask: 255.255.255.0

IP Address: 192.168.1.100  
Subnet Mask: 255.255.255.0

## 10. Cautions

- (1) **Power cable is connected after all the other wiring.** If the device is working abnormally, please shut down the power first, then make the necessary check. Kindly reminds you that any hot-plugging may damage the device, and it is not included in the warranty.
- (2) We recommend the DC 3A/12V power supply. Please contact our technical staff for details.
- (3) **Please read carefully the terminal description and wiring by rule strictly.** Any damage caused by improper operations will be out of the range of our guarantee.
- (4) **Keep the exposed part of wire less than 5mm**, to avoid unexpected connection.
- (5) **Please connect the 'GND'** before all the other wiring especially under the environment with much electrostatic.
- (6) Do not change the cable type because of long distance between the power and the device.
- (7) Please use specified RS485 wire, RS485 active converter, and adopt bus-type wiring. If the communication wire is longer than 100 meters, it is needed to parallel a terminal resistance on the last device of RS485 bus, and the value is about 120 ohm.