


Biotime 8 – Add device – Auto add

Following are steps to take when you add a device – with Cloud settings

My device is not showing under my software devices. Please see Setup a device with cloud settings

Device > Device > Device

Click on Edit

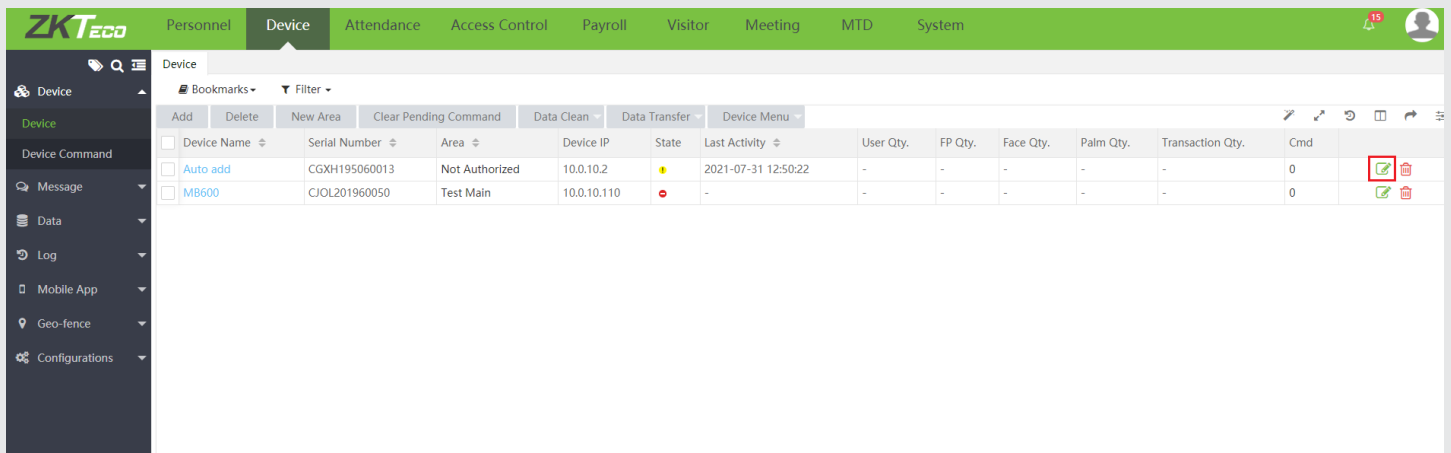

Edit ✕

Device Name* <input type="text" value="Auto add"/>	Enable Access Control* <input type="text" value="No"/>
Serial Number* <input type="text" value="CGXH195060013"/>	Device IP* <input type="text" value="10.0.10.2"/>
Area* <input type="text" value="Not Authorized"/>	Time Zone* <input type="text" value="Etc/GMT+8"/>
Attendance Device* <input type="text" value="Yes"/>	
Request Heartbeat* <input type="text" value="10"/> <input type="text" value="Seconds"/>	Transfer Mode* <input type="text" value="Real-Time"/>

Device Name: Name the device

Serial number: The Serial number of the Time and Attendance device

Device IP: the IP address inside the device *See Device IP Document*

Area: select the Area where the Time And Attendance device belongs to.

Time Zone: Select the GMT zone. The system will automatically synchronize the particulate Timezone.

Attendance Device: Yes, if it is used for attendance.

Heartbeat Request: Set the time for the device automatically transmit to data to the system

Transfer Mode: Select the data transfer Mode between software and device. The transfer mode can be real-time or at the specified time.

Click Confirm to add the device.