


Biotime 8 – Add Device Manually

Following are steps to take when you add a device Manually.

Device > Device > Device

Click on Add

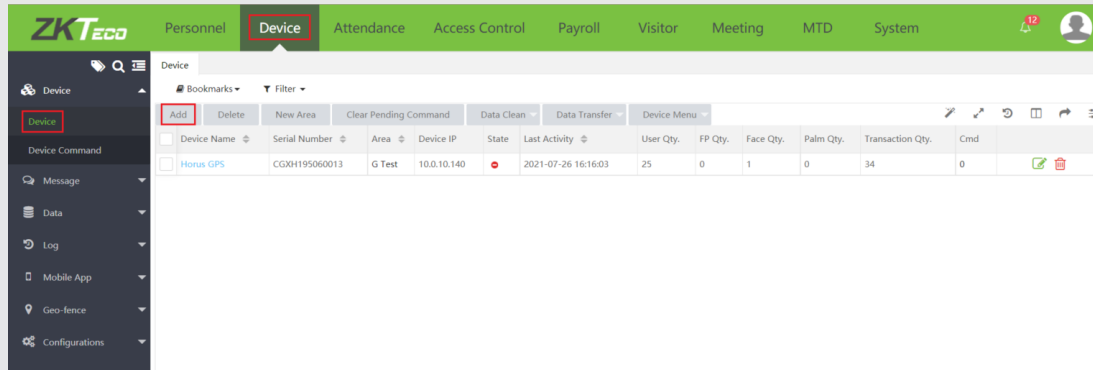

Fill in all the fields.

The Red * is compulsory.

Add ✕

| | |
|---|--|
| Device Name* <input type="text" value="MB600"/> | Enable Access Control* <input type="text" value="No"/> |
| Serial Number* <input type="text" value="CJOL201960050"/> | Device IP* <input type="text" value="10.0.10.110"/> |
| Area <input type="text" value="Test Main"/> | Time Zone* <input type="text" value="Etc/GMT+2"/> |
| Attendance Device* <input type="text" value="Yes"/> | Transfer Mode* <input type="text" value="Real-Time"/> |
| Request Heartbeat* <input type="text" value="10"/> <input type="text" value="Seconds"/> | |

Serial number: The Serial number of the Time and Attendance device

Device IP: the IP address inside the device *See Device IP Document*

Area: select the Area where the Time And Attendance device belongs to.

Time Zone: Select the GMT zone. The system will automatically synchronize the particulate Timezone.

Attendance Device: Yes, if it is used for attendance.

Heartbeat Request: Set the time for the device automatically transmit to data to the system

Transfer Mode: Select the data transfer Mode between software and device. The transfer mode can be real-time or at the specified time.

Click Confirm to add the device.