


## Biotime 8 - Clearing data inside a device using a software

Following are steps to take when you clear the device.


Device > Device > Device

Select the device you want to clear by ticking in the tick box

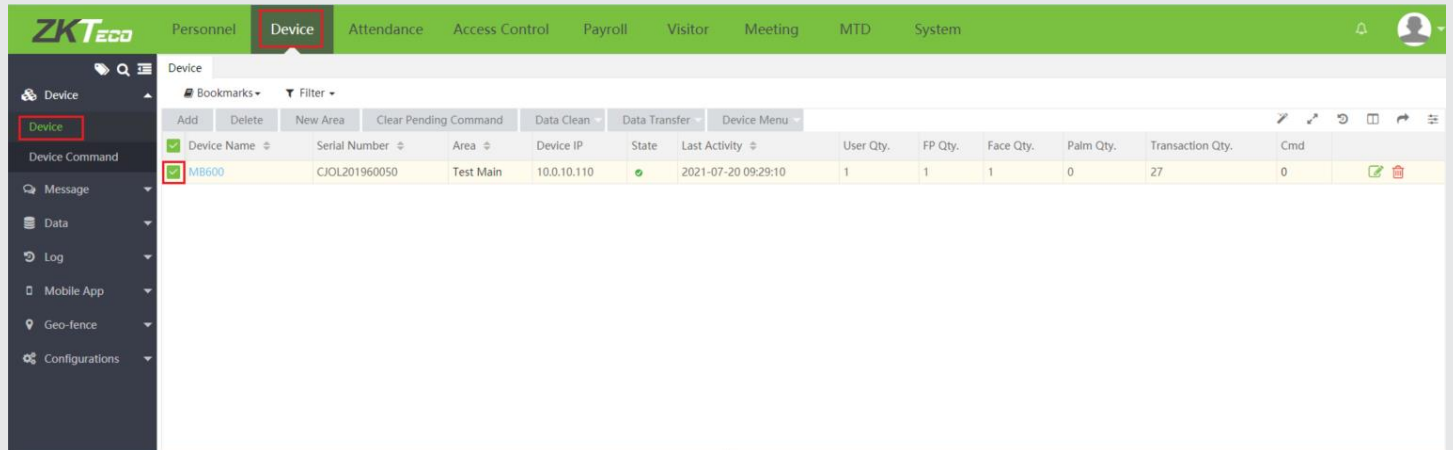

Select Data clean

There are a few data clean

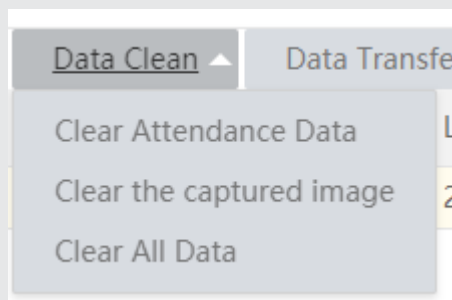


**Clear Attendance Data:** Clear all attendance Data

**Clear Capture Photo:** You can clear the attendance photos on a T&S device

**Clear All Data:** You can clear all the data on a T&A device

### Clear Attendance Data


Click on clear Attendance data

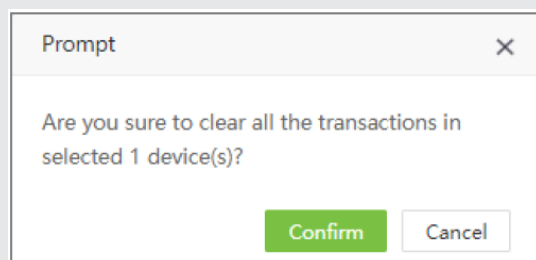

Click on Confirm

**Clear Capture Photo**


Click on clear Capture Photo

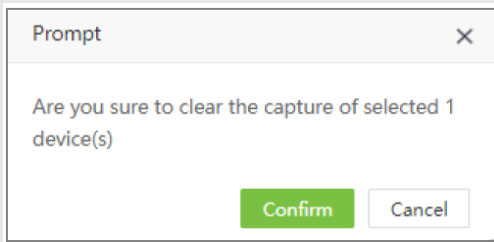

Click on Confirm

**Clear All Data**

Click on clear all Data

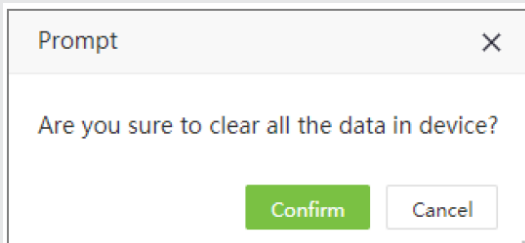

Click on Confirm