



Biotime 8 – Public Message

The commands that were executed will be displayed here.

Following are steps to take when you add a Public Message

Device > Message > Public

Select Add

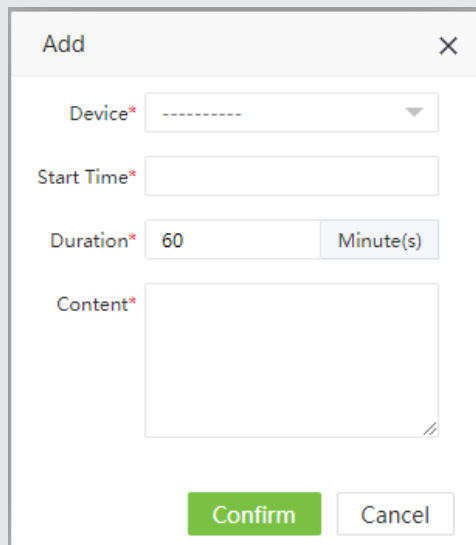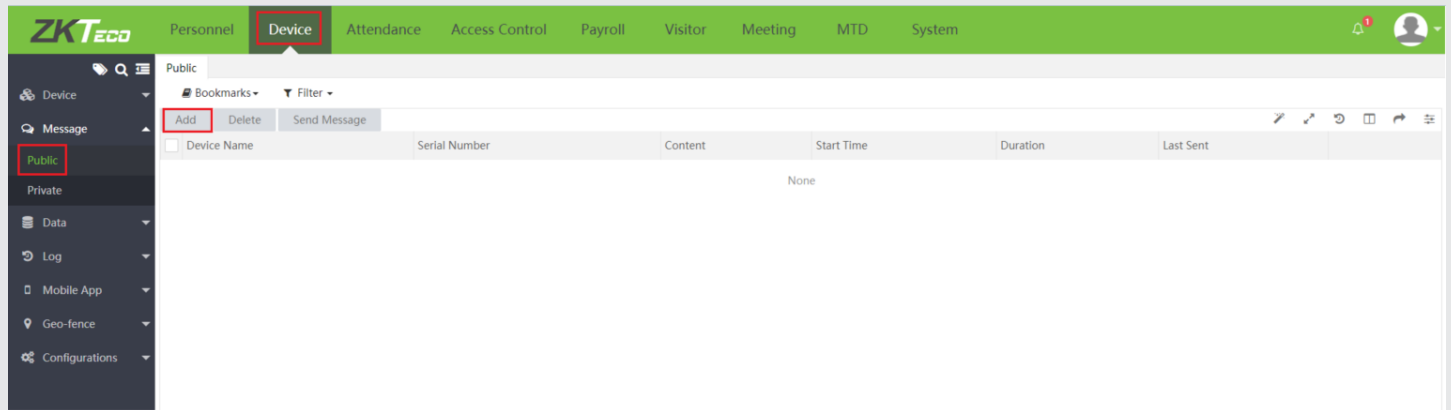

The 'Add' dialog box contains the following fields:

- Device***: A dropdown menu with a dashed line indicating no selection.
- Start Time***: A text input field.
- Duration***: A text input field containing '60' and a unit selector set to 'Minute(s)'.
- Content***: A large text area for entering the message content.

At the bottom of the dialog are two buttons: 'Confirm' (green) and 'Cancel' (white).

Device: select the device where you want the message to show

Start time: When do you want the message to start

Duration: How long do you want the message to show

Content: This is where you will add your message

Add ✕

Device* CJOL201960050

Start Time* 2021-07-21 08:00:00

Duration* 60 Minute(s)


Content*
Enjoy your day!

Click confirm.

The message is on the software but not on the device

Tick the message in the tick box and select send message tab

Device > Message > Public

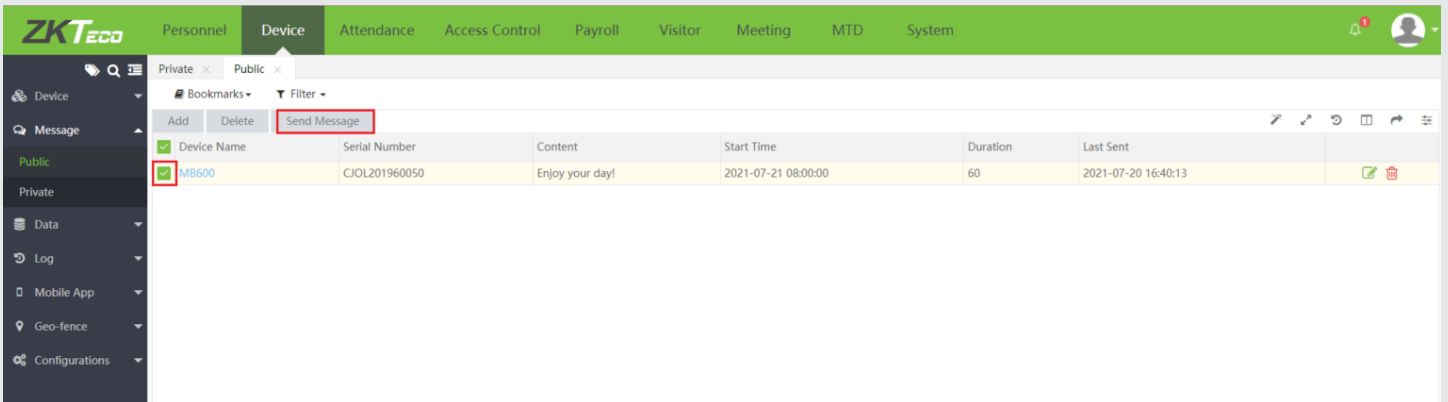

The screenshot shows the ZKT Eco software interface. The top navigation bar includes 'Personnel', 'Device', 'Attendance', 'Access Control', 'Payroll', 'Visitor', 'Meeting', 'MTD', and 'System'. The 'Device' tab is active, and the 'Public' message list is displayed. The list has columns for Device Name, Serial Number, Content, Start Time, Duration, and Last Sent. A row is highlighted with a green checkmark in the first column, and the 'Send Message' button is highlighted with a red box.

Device Name	Serial Number	Content	Start Time	Duration	Last Sent
MB600	CJOL201960050	Enjoy your day!	2021-07-21 08:00:00	60	2021-07-20 16:40:13

Prompt ✕

Are you sure to send the message?

Select Confirm